 
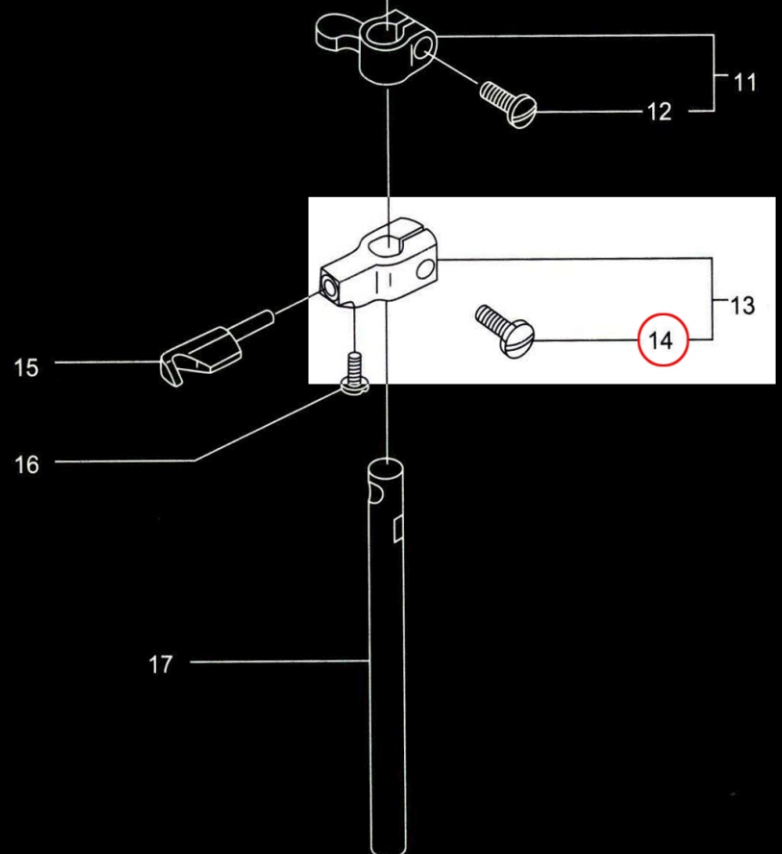 
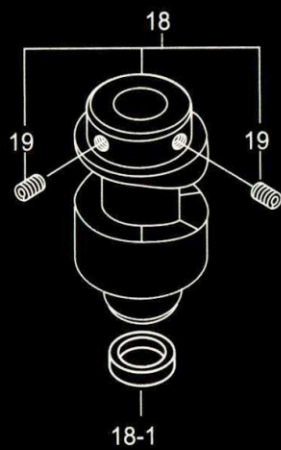 
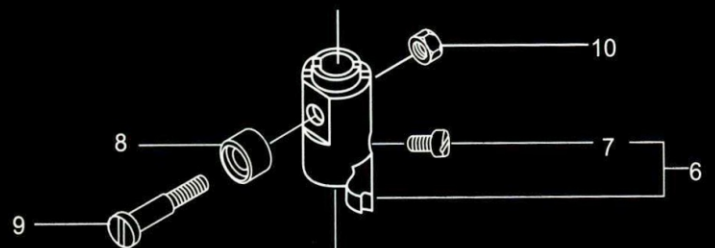 
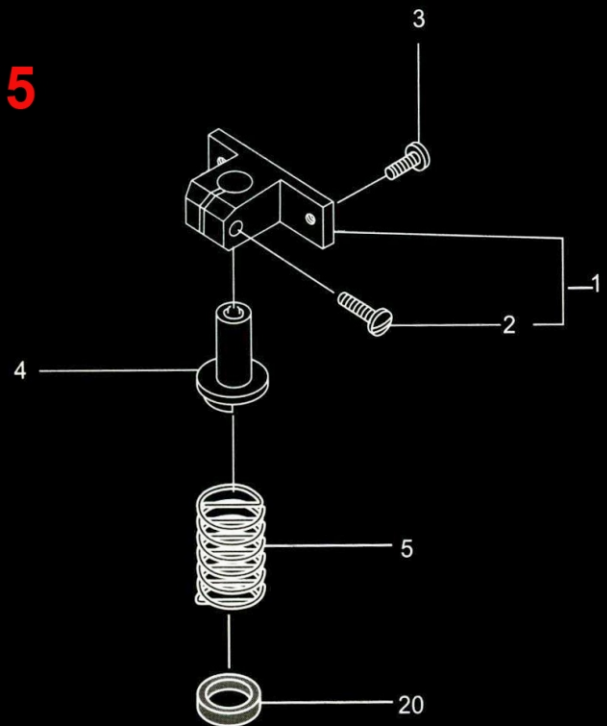 


**PART №**  
**6001415**

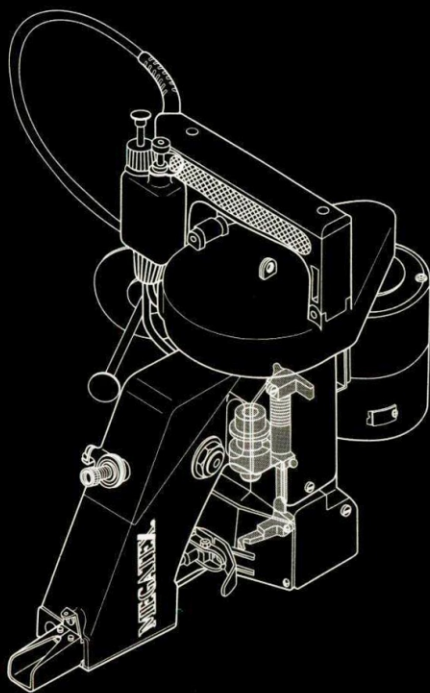

## (4) Looper driving parts

| ITEM | PART NO.  | DESCRIPTION                 | Q'ty | REMARKS |
|------|-----------|-----------------------------|------|---------|
| 1    | 6001601   | SPRING SUPPORTER BLOCK      | 1    | (2)     |
| 2    | 6001602   | SCREW, FOR 6001601          | 1    |         |
| 3    | 6001023   | SCREW, FOR 6001601          | 2    |         |
| 4    | 6001604   | SPRING SUPPORTER            | 1    |         |
| 5    | 6001605   | SPRING                      | 1    |         |
| 6    | 6001606   | LOOPER ROCKER SHAFT ARM (A) | 1    | (7)     |
| 7    | 6001435   | SCREW, FOR 6001606          | 1    |         |
| 8    | 6001608   | ROLLER                      | 1    |         |
| 9    | 6001609   | ROLLER STUD SCREW           | 1    |         |
| 10   | 6001610   | NUT, FOR 6001609            | 1    | (12)    |
| 11   | 6001611   | LOOPER ROCKER SHAFT ARM (B) | 1    |         |
| 12   | 6001612   | SCREW, FOR 6001611          | 1    |         |
| 13   | 6001613   | LOOPER ROCKER               | 1    |         |
| 14   | 6001415   | SCREW, FOR 6001613          | 1    | (14)    |
| 15   | 6001615   | LOOPER                      | 1    | (19)    |
| 16   | 6001451   | SCREW, FOR 6001415          | 1    |         |
| 17   | 6001617   | LOOPER ROCKER SHAFT         | 1    |         |
| 18   | 6001618   | LOOPER DRIVE CAM            | 1    |         |
| 18-1 | 6001618-1 | WASHER                      | 2    |         |
| 19   | 6001619   | SCREW, FOR 6001618          | 2    |         |
| 20   | 6001224   | OIL FELT                    | 1    |         |